

sailfeeder

RF

Supplied By American Rigging Supply, Inc.

precision sailguides for main & headsail

These feeders guarantee a smooth, fast sail hoist with no hand feeding.

RF features

Mainsail feeder RF/MA locates in the mast track below the luff entry and protects luff tape during the hoist. No drill is needed, just a screwdriver

Headsail feeder RF/H guides any flaked genoa from the deck cleanly up into the foil

Headsail feeders are supplied with a length of line for attachment in their correct **free pivoting** position between luff entry and deck

Luff tape protection feature

Forged 316 stainless steel body

Graphite loaded, **anodised alloy rollers**

Mainsail



RF/MA

Headsail



RF/H



rope management