



Use the following diagrams to select the fittings you need as well as the proper length of wire for the job.


- 1) Carefully measure both port and starboard with a steel tape measure. (Measure from the clevis pins attachment points on the rails.)
- 2) Before starting installation, read the instructions that accompany the fittings and carefully follow these directions.

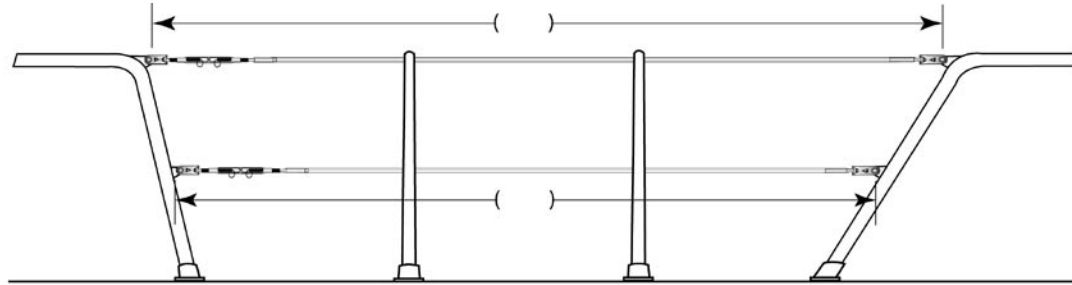

**NO GATE**

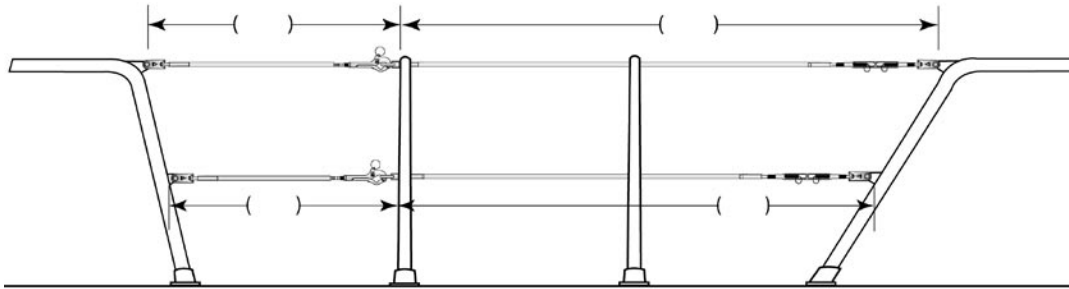

**AFT GATE**

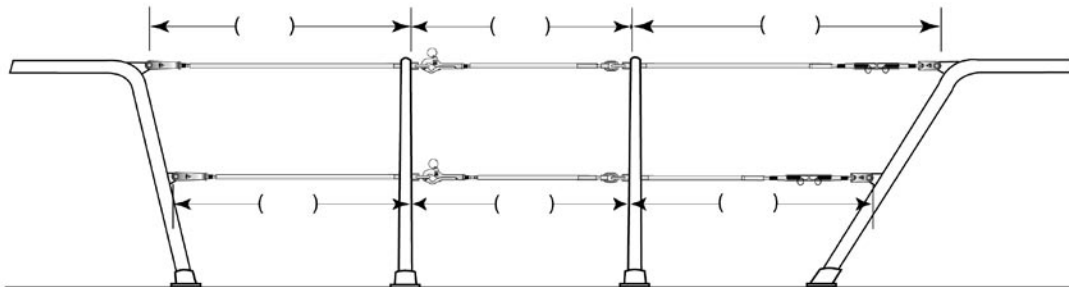

**GATE AMIDSHIP**

*Please Contact American Rigging Supply, Inc. For More Information*

