


Ordering Furling

	OOAL	MKIV	MKIII	CRUISING
Note: Typical boat lengths are listed as a guideline but are not the determining factor. Check with Harken® if your length varies.				
FITS BOATS <i>Typical boat lengths are listed as a guideline but are not the determining factor. Check with Harken® if your length varies.</i>	Small Cruising Boats Unit 00: 20 - 26 ft (6 - 8 m)	Performance Racers/Cruisers Unit 0: 22 - 30 ft (6.5 - 9.1 m) Unit 1: 28 - 36 ft (8.5 - 11 m) Unit 2: 35 - 46 ft (10 - 14.2 m) Unit 3: 45 - 60 ft (13.7 - 18.3 m)	Performance Racers/Cruisers Unit 3.25: 55 - 70 ft (16.8 - 21.3 m) Unit 3.5: 65 - 80 ft (19.8 - 24.4 m) Unit 4: 75 - 90 ft (22.9 - 27.4 m) Unit 4.5: 85 - 110 ft (25.9 - 33.5 m)	Cruising Boats Unit 1: 28 - 36 ft (8.5 - 11 m) Unit 2: 35 - 46 ft (10 - 14.2 m)
Foils	Double groove Air Foil® Stainless steel feeder	Double groove Air Foil® Stainless steel feeder	Double groove Air Foil® Stainless steel feeder	Single Groove Round Foil
Halyard and Tack Swivel	Fixed	Independent Swivels for improved sail shape	Independent Swivels for improved sail shape	Fixed
Drum	Removable split drum for racing	Removable split drum for racing	Removable split drum for racing	—
Line	Included	Included on Units 0, 1, 2	Not included	Included

1. Choose unit based on wire or rod, and clevis pin diameter

2. Measure headstay from center of pin holding headstay to masthead toggle (A), to center of pin holding headstay to chainplate (B) to determine if extra foil and connector is required.

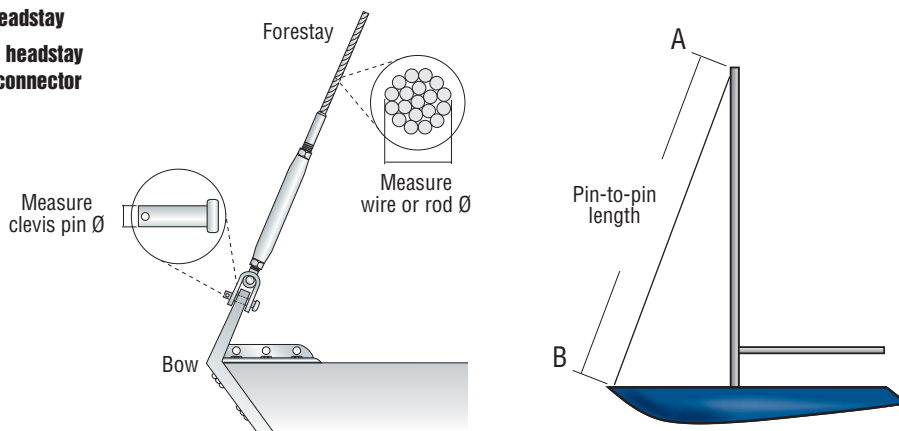

3. Choose clevis pin assembly or toggle assembly

	Clevis pin assembly	Toggle assembly	—	Toggle assembly
--	---------------------	-----------------	---	-----------------

4. Choose terminal if required

	No terminal required Installs over existing turnbuckle	No terminal required* Installs over existing turnbuckle Turnbuckle accessible for adjustment by raising the drum	Built-in turnbuckle Headstay terminal required: Swage**, rod***, Norseman®, or Sta-Lok® (sold separately)	No terminal required* Installs over existing turnbuckle Turnbuckle accessible for adjustment by raising the drum
--	---	--	--	--

5. Choose optional parts as needed (extra foil and connector, lead block kits, halyard restrainers, snap shackles, stanchion mount base)

6. Sail modifications: Ask your sailmaker to add a luff tape to your genoa.

Luff Tape Size	Unit 00: #6 (5/32" or 5 mm)	Unit 1, 2, 3: #6 (5/32" or 5 mm)	Unit 3.25, 3.5, 4, 4.5: #6 (5/32" or 5 mm) Units 4, 4.5: #7 (7/32" or 6 mm) Carbon Units: #6 (5/32" or 5 mm)	Unit 1, 2: #6 (5/32" or 5 mm)
-----------------------	-----------------------------	----------------------------------	--	-------------------------------

*Rod headstays require Harken® rod adapter stud for existing turnbuckle.

**Swage fittings must be installed by rigger with special equipment. Sta-Lok® or Norseman® can be installed without special equipment.

***Rod headstays require a Harken® rod adapter stud and must be cut and coldheaded by an authorized rod service center.